



Eclipse 180G2 Outer Case Replacement

This guide will show the removal of the internal circuit board from the outer shell without damaging the device.

Written By: Jesse Minor



INTRODUCTION

Removal of the internal circuit is crucial step in replacing any component. This guide is the first step in replacing any part on the device.



TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Outer Case



- Remove the two screws on the bottom of the device with a Phillips head screwdriver.
- Use a spudger to remove the plastic plate from the bottom of the player.

Step 2 — Remove inner circuit from case shell

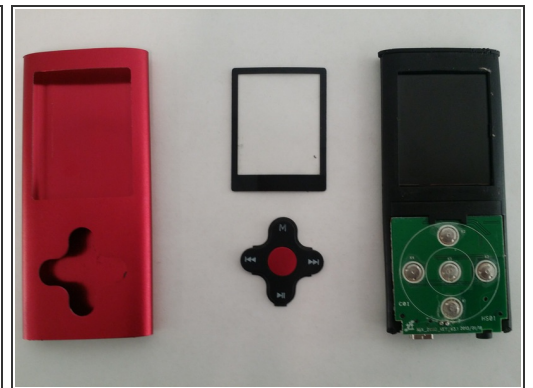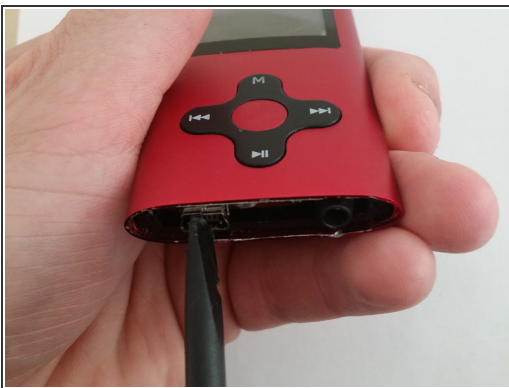

- Use the spudger to push the USB port on the bottom of the device inward.
- Hold the device firmly between two fingers. Be sure you aren't holding down the top of the device; the circuit board will slide out of the shell through that end.
- The plastic LCD cover and the key pad will now be free; they were held in place by the tension between the case and the internal circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 01:52:32 AM.